Ektor

SafeTest




EMERGENCY TESTING, **BUILT IN**

Every SafeTest fitting runs its own 90-minute duration test every six months and shows the result on the fitting. No timers, no test switches, no software. Standard across the Ektor Core range.

HOW IT WORKS


1

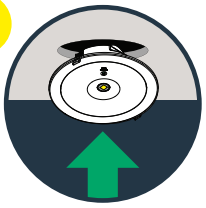

INSTALL AND ACTIVATE

Install as normal. Activate SafeTest on a single fitting or a whole circuit using a simple switching sequence at the mains switch.


2

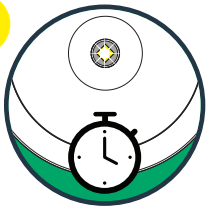

AUTOMATIC TESTING

Every six months, each fitting runs a full 90-minute test, checking the battery, lamp and control gear.

3

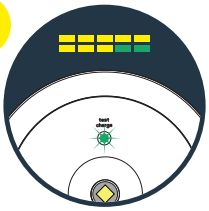

CHECK THE RESULT

The LED indicator shows pass or fault. Press the button to recall the last result at any time.

WHO IT HELPS

INSTALLERS

Same install, no extra hardware, no extra cost on Core. Give your client lower testing costs from day one.

BUILDING OWNERS

No more paying for 90-minute duration tests on site. Clear results on every fitting, ready for your logbook.

TESTING CONTRACTORS

Check the LEDs, record the result, move on. Inspections take minutes, not hours.

STANDARD ON EKTOR CORE

SafeTest comes standard across the Ektor Core range at no extra cost, backed by Ektor's 5-year warranty. It's also available on Ektor One.

SAFETEST AT A GLANCE

TEST INTERVAL	Every 6 months
TEST DURATION	Full 90 minutes
CHECKS	Battery, lamp and control gear
INDICATION	LED pass/fault on each fitting
RESULT RECALL	Push button, any time
ACTIVATION	Individual or grouped, via mains switching
MANUAL TEST	Available any time
STANDARD	Self-tests in accordance with AS/NZS 2293
OPERATION	Standalone (SPU) - no network, data cabling or software

AVAILABLE ACROSS



LEDFIRE | MERCURY | RAZOR | DUO | BATTENS | BUNKERS & CIRCULARS

Ektor One

NEED REMOTE MONITORING?

Ektor One connects via DALI-2 or Thread wireless, with device status and compliance reporting from a remote dashboard.

SEE IT IN ACTION

Watch the SafeTest instructional video

READ MORE

Visit our website for more information

Available at **your local wholesaler.**

Ektor